


DS160 - EPROM Location and Installation Procedure

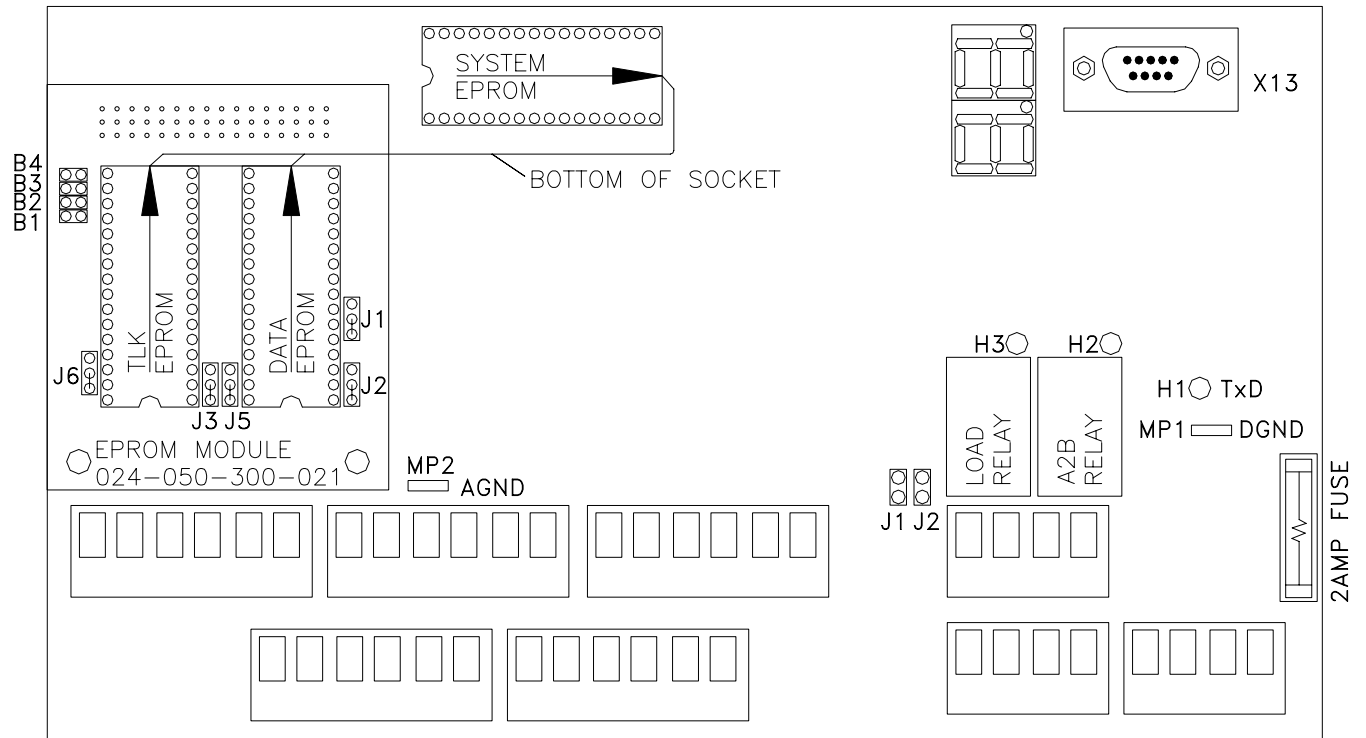

- Ensure the notch is in the correct direction.
- The DATA, TLK, and SYSTEM EPROM's fill the bottom of the socket as shown by the arrows.
- Place EPROM's in the correct EPROM socket as shown.

MP1 = DGND
MP2 = AGND

LED'S

H1 – TxD on when transferring and receiving data form console

H2 – A2B on when A2B relay energized

H3 – LOAD on when LOAD relay energized

Two Digit Indication, normal two zeros or will show an error code if error condition occurs

Fuse - 2AMP