


THEORY - BASIC ADJUSTMENT AND VOLTAGE CHECKS

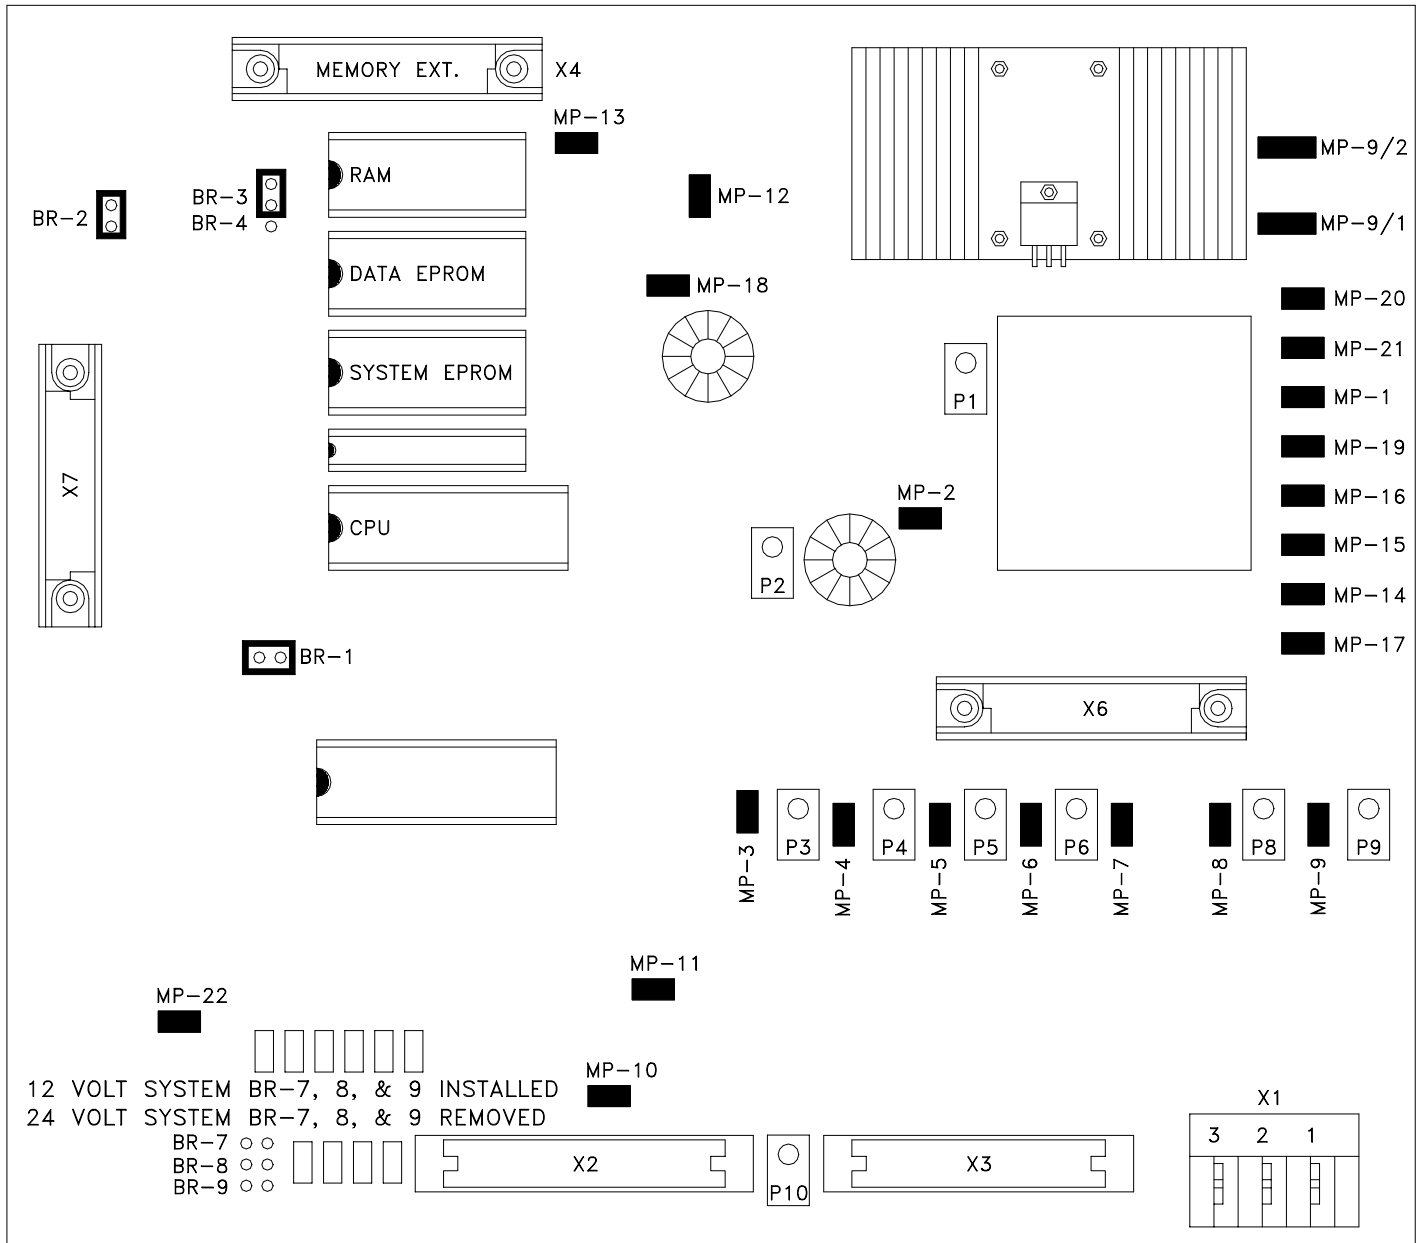

MP TEST POINTS

MP- 1 = +5V	MP-11 = GROUND
MP- 2 = -5V	MP-12 = +5V
MP- 3 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-13 = DIGITAL GROUND
MP- 4 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-14 = +9V
MP- 5 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-15 = ANALOG GROUND
MP- 6 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-16 = -9V
MP- 7 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-17 = +5V
MP- 8 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-18 = +5V
MP- 9 = ANALOG MEASURING CHANNEL REFERENCE SOFTWARE	MP-19 = -5V
MP-9/1 = COMPUTER GND	MP-20 = OPERATING VOLTAGE
MP-9/2 = CRANE GND	MP-21 = INPUT VOLTAGE
MP-10 = +3V REFERENCE VOLTAGE	