
PROCEDURE - LENGTH AND ANGLE SENSOR ADJUSTMENT

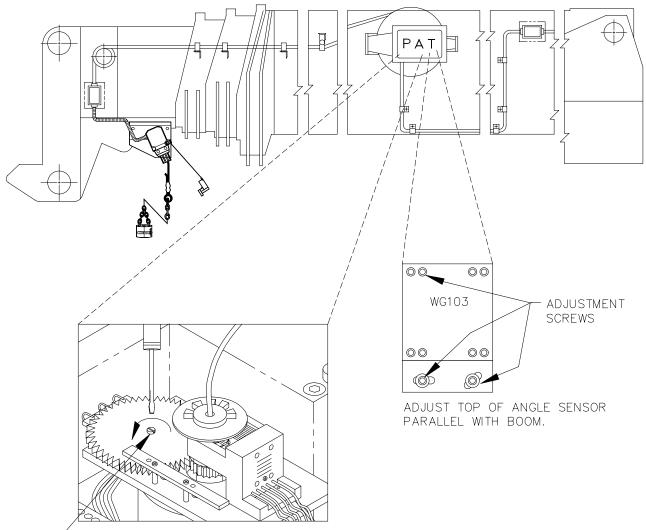

- ADJUST LENGTH POTENEIOMETER, WITH BOOM FULLY RETRACTED TURN THE CENTER SCREW COUNTER CLOCKWISE TO A SOFT STOP.