


## PROCEDURE - EPROM LOCATION AND INSTALLATION

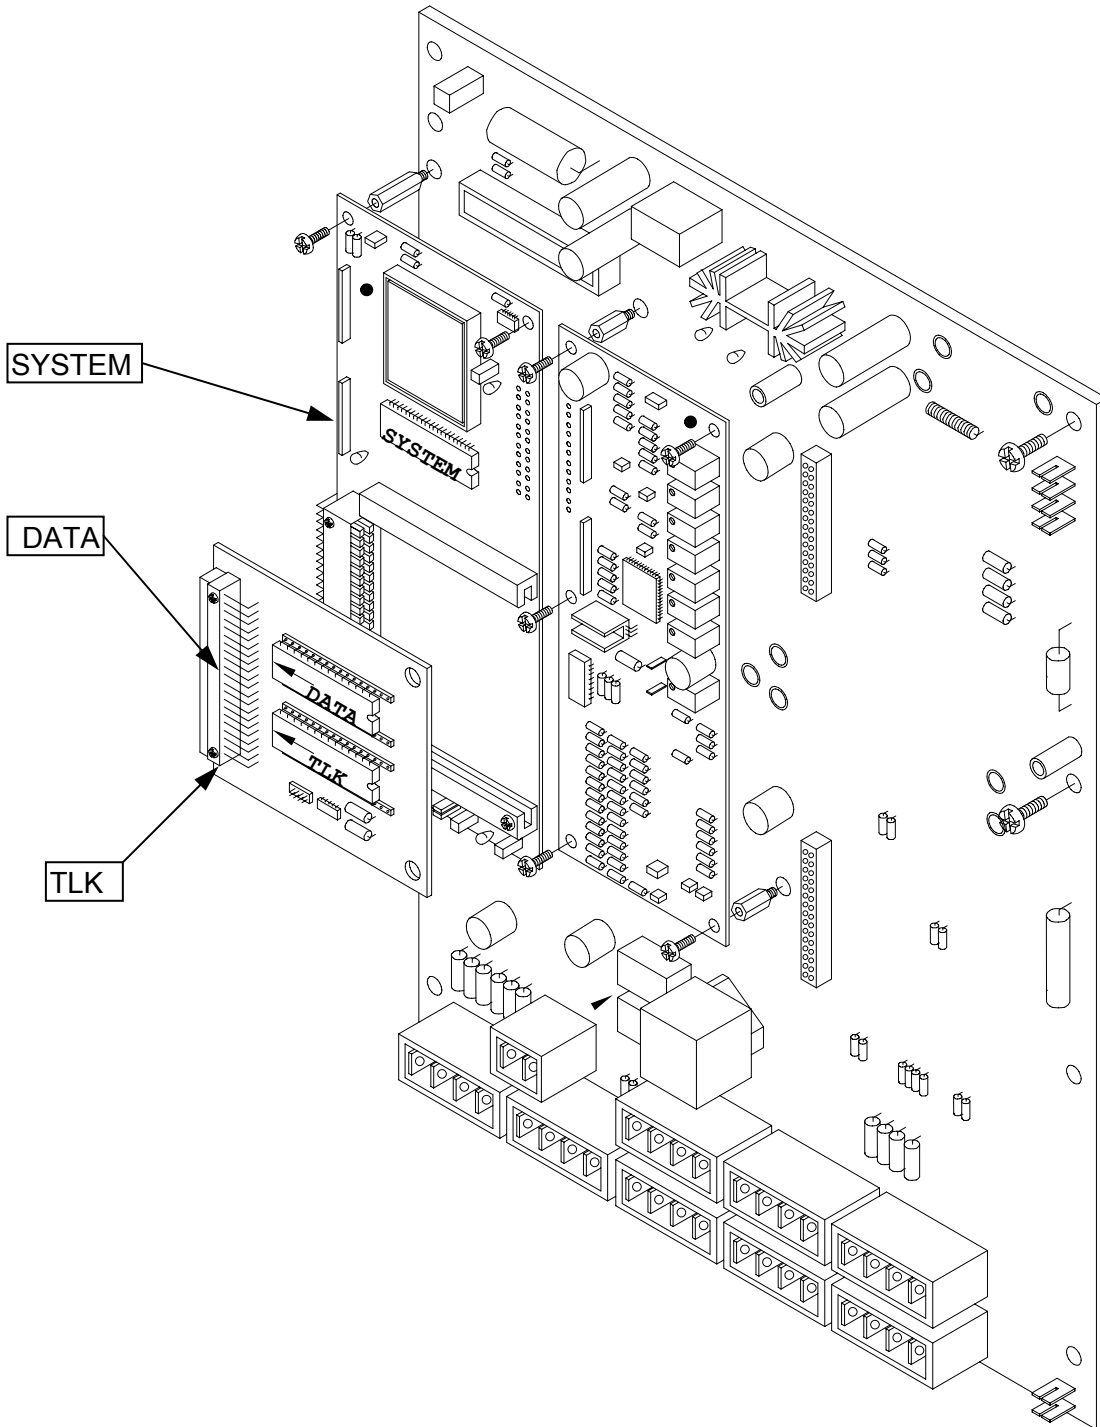

- Ensure the notch is in the correct direction.
- The DATA and TLK EPROMs fill the bottom of the socket as shown by the arrows.
- Place EPROMs in the correct EPROM socket as shown.