


## DS150C - Central Unit Board Layout And Measuring Points

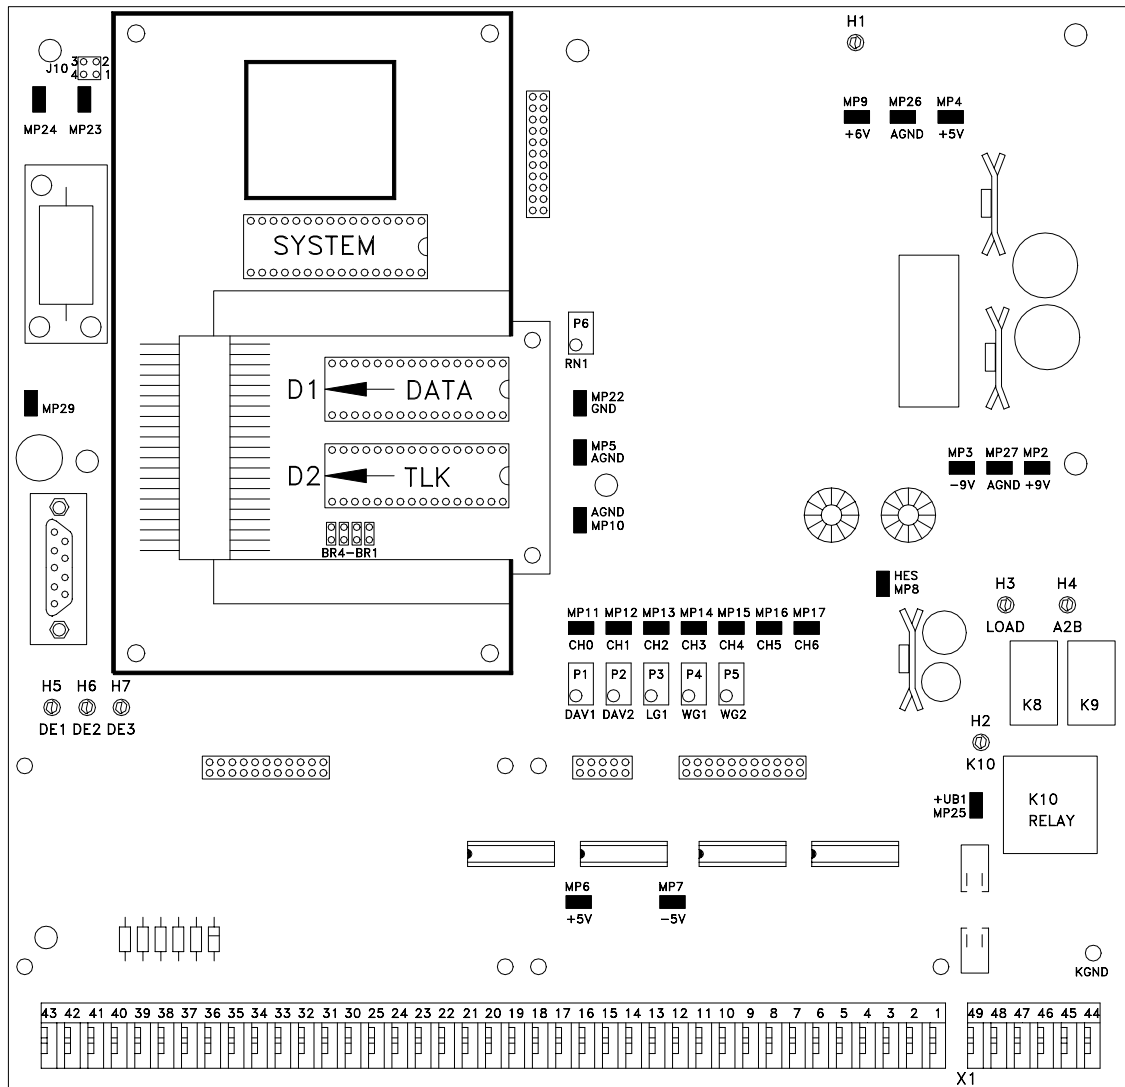

### Measuring Points

MP0: AGND

MP2: +9V

MP3: -9V

MP4: +5V

MP5: AGND

MP6: + 5V sensors supply

MP7: - 5V sensors supply

MP8: HES

MP9: +6V

MP10: AGND

MP11: PISTON PRESSURE SIGNAL

MP12: ROD PRESSURE SIGNAL

MP13: LENGTH SIGNAL

MP14: ANGLE SIGNAL 1

MP15: ANGLE SIGNAL 2

MP22: GND

MP23: +3.66V

MP24: +3.73V (BATTERY)

MP25: +UB

MP26: GND

MP27: AGND

MP29: +5V