


DS150 - Central Unit Board Layout And Measuring Points 024-150-300-001

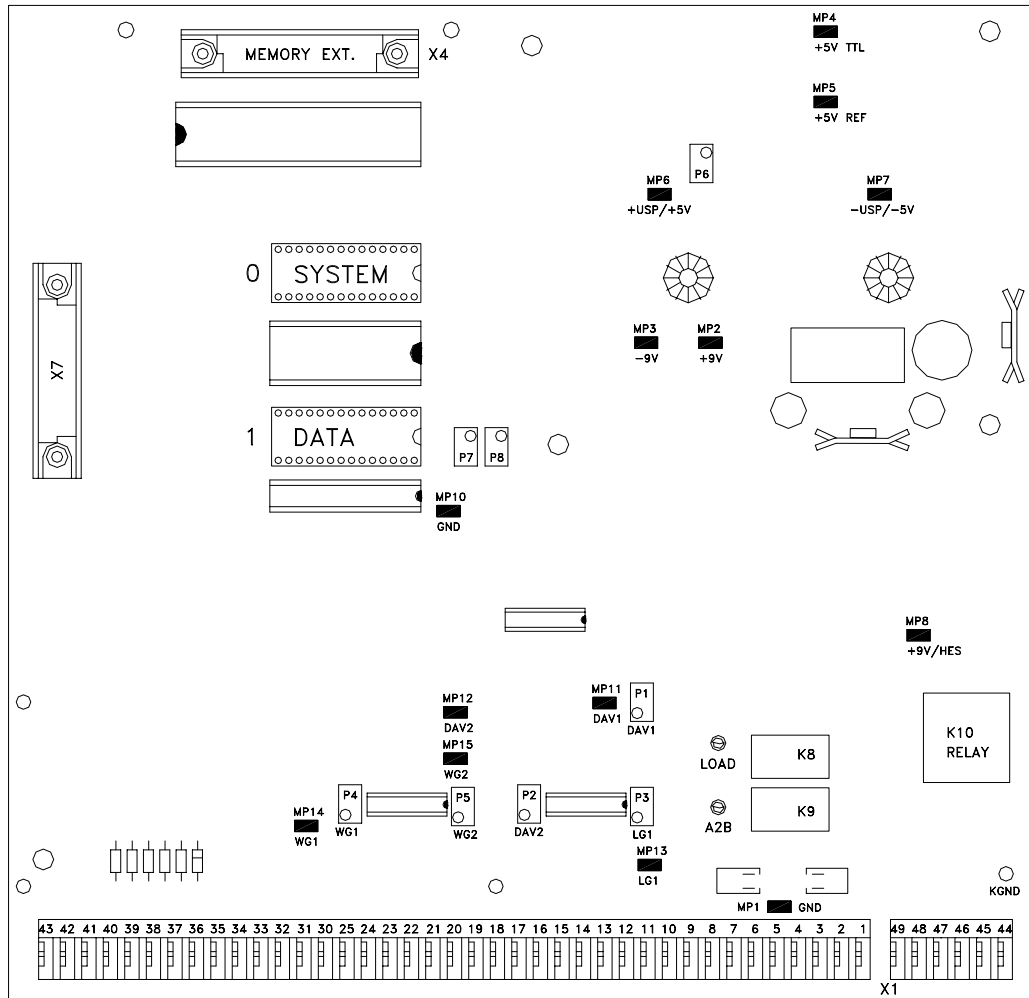

Measuring Points

- MP1: AGND
- MP2: +9V
- MP3: -9V
- MP4: 5V TTL
- MP5: 5V REF
- MP6: +5V/+UPS sensors supply
- MP7: -5V/-UPS sensors supply
- MP8: +9V HES
- MP10: AGND
- MP11: DAV1 piston pressure signal
- MP12: DAV2 rod pressure signal
- MP13: LW1 length signal
- MP14: WG1 angle signal #1
- MP15: WG2 angle signal #2

LED's

- LOAD: Overload relay ON(energized/normal conditions)/OFF (de-energized)
- A2B: A2B relay ON(energized/normal conditions)/OFF (de-energized)